

Wavetool instructions for connecting to Audio LTD A10-RACK

1.

Verify that you are running the latest version of Wavetool. You'll find it here:
<https://wavetool.fi/download.html>

2.

Verify that you have the latest firmware on **Audio Limited** A10-RX, **Wisycom** MCR42 or **Lectrosonics** SRc receivers. Please also note that only single manufacturer's receiver can be used in A10-Rack together with Wavetool. So for example mixture of A10-RX and Wisycom MCR42 receivers in one A10-Rack will not work in Wavetool.

3.

Install the driver before connecting the USB cable from the computer to the A10-Rack:
<https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers> -> Download -> CP210x VCP Mac OSX Driver (or download it directly from this link: https://www.silabs.com/documents/public/software/Mac_OSX_VCP_Driver.zip).

4. The first time you launch Wavetool, go to the Preferences and select the receiver (A10-RX, MCR42 or SRc) you are using in Audio Ltd A10-RACK and then **reboot** Wavetool. Also make sure that you have **NOT** clicked the box "Search for Sennheiser EM3532 devices" as A10-RACK and EM3532 can not be used in Wavetool at the same time.

5. The receiver channel identification is done by the frequency in use. When entering Wavetool Channel i/o, under the Wireless Devices drop down menu, you can pair the wanted Wavetool channel with the receiver channel.

6. Make sure you have an independent frequencies on all the receivers to let Wavetool to identify the receivers.

7. If you change the frequency on your receiver when it's connected to Wavetool, it's easier to reboot Wavetool to make sure that the frequencies are shown correctly in the Wireless Device drop down menu.

For more information, please contact support@wavetool.fi
